



IMPORTANT! EMERGENCY LIGHTING



This building contains Clevertronics Clevertest Plus exit and emergency luminaires that self-test every six months without the need to perform a manual discharge test.* Current test results are stored & displayed in each fitting's status LED indicator which can be collected by a simple visual check, or with the Clever Sparky App.

**Any non-self-test exit signs and emergency luminaires on this site require manual duration testing.*

Visual Displays – Every minute the exit sign or luminaire's status LED will cycle through short periods of rapid green flash and then display the fittings status through "traffic light sequences" for visual inspection.



Rapid Green Flash indicates that the self-test function has been activated on a luminaire, which is then followed by one of these visual indications shown below to confirm the fitting status.



Solid Green; Passed last test, Record as passed.



Slow 2 sec Yellow flash. Fitting is currently performing a test.



Solid Yellow, Short Green; Tested and passed within the last 5 days, Record as passed. (After 5 days indicator reverts to Solid Green)



Blinking Yellow; Battery failed duration, Record as failed.



Blinking Yellow and Green; LED lamp failed, Record as failed.



Short Red/Yellow and longer Red sequence; Control gear reset required. Record as failed.

Refer to the *Clevertest Quick Guide* available for download at our websites.

Site will perform a self-test during the _____ week of the _____ month and during the _____ week of the _____ month.

To initiate a battery duration test outside of these weeks turn off the circuit breakers powering emergency lighting for 18 seconds then back on again. This will not change the scheduled test dates.



From a power "ON" state

OFF 18 secs

ON



SITE CONTACT



NEED ASSISTANCE?

www.clevertronics.com.au
www.clevertronics.co.nz

MANAGE TEST RECORDS AND SITE COMPLIANCE ACROSS
MULTIPLE SITES
WITH THE APP



#####